

1 Scope

This document shows the schematic of the EVB and how it can be used easily to get started. Note that any of the code is provided as is, and is not guaranteed to be error free. It is only to be used as a demo.

2 Ordering information

Order code	Description
EVB90392_010 ⁽¹⁾	MLX90392ELQ-AAA-010 ($\pm 5\text{mT}$ magnetic range), on a breakout PCB, 1.8V only, no linear regulator
EVB90392_011 ⁽¹⁾	MLX90392ELQ-AAA-011 ($\pm 50\text{mT}$ magnetic range), on a breakout PCB, 1.8V only, no linear regulator
EVB90392_010_h ⁽¹⁾	MLX90392ELQ-AAA-010 ($\pm 5\text{mT}$ magnetic range), on a breakout PCB, with precision headers compatible with the DVK magnetic, including 1.8V regulator
EVB90392_011_h ⁽¹⁾	MLX90392ELQ-AAA-011 ($\pm 50\text{mT}$ magnetic range), on a breakout PCB, with precision headers compatible with the DVK magnetic, including 1.8V regulator

Notes:

- Latest information: <https://www.melexis.com/en/product/evb90392/evaluation-board-mlx90392>
- I²C address 0x0C for all EVB
- DVK version can be powered with 3.3V
- PCB dimensions: 25mm x 35mm



EVB90392_010

¹ The original names of the EVB was EVB90392_xxx_yyy, with xxx=BK or DVK (for _h variant) and yyy equal to the last three numbers.

Contents

1	SCOPE.....	1
2	ORDERING INFORMATION	1
3	SCHEMATIC AND CONNECTION	3
3.1	DIFFERENT EVB VERSIONS	3
3.2	SCHEMATIC	3
3.3	MICROCONTROLLER AND GUI SETUP	4
4	GUI	5
4.1	INITIALIZATION	5
4.2	COMMANDS	6
4.3	MEASURING	7
5	SERIAL COMMANDS.....	8
5.1	READ N BYTES	8
5.2	READ DIRECT N BYTES	9
5.3	ADDRESSED RESET	9
5.4	WRITE N BYTES	10
5.5	CHANGE I ² C FREQUENCY	11
6	EXAMPLES	12
6.1	CHANGING FILTER SETTINGS.....	12
6.2	PERFORMING A SINGLE MEASUREMENT (XYZ).....	13
6.3	PERFORMING A CONTINUOUS MEASUREMENT (XYZT, 100Hz), AND RETURNING TO IDLE MODE	14
7	REVISION HISTORY.....	14
8	DISCLAIMER.....	15

3 Schematic and connection


3.1 Different EVB versions

Important: the MLX90392 operates at 1.8V, which means that when connecting it to a microcontroller one needs to either use a 1.8V microcontroller or use a level shifter in between. The EVB for both the 50mT and the 5mT version are offered in two flavours for exactly this reason. The PCB itself is the same, but some components are not mounted on the breakout version:

- **Breakout** version: The IC is mounted, together with a 100nF decoupling capacitor. The four pins of the IC are directly routed to the 4-pin header.
- **DVK Magnetic** version: The IC is mounted, together with a 100nF decoupling capacitor. Also a level shifter and 1.8V regulator is added to the PCB to translate the 3.3V supply and signal levels from the main DVK to the 1.8V levels needed by the IC. This version can be used also with other microcontrollers not operating at 1.8V, using the parallel connectors. Note that the drill holes of these are smaller than the standard headers, this due to the DVK having precision header sockets.

3.2 Schematic

The schematic is for each version (Breakout and DVK) the same, and shown below for the -011 version of the IC. Some components are never populated but can be placed by the user in case needed.

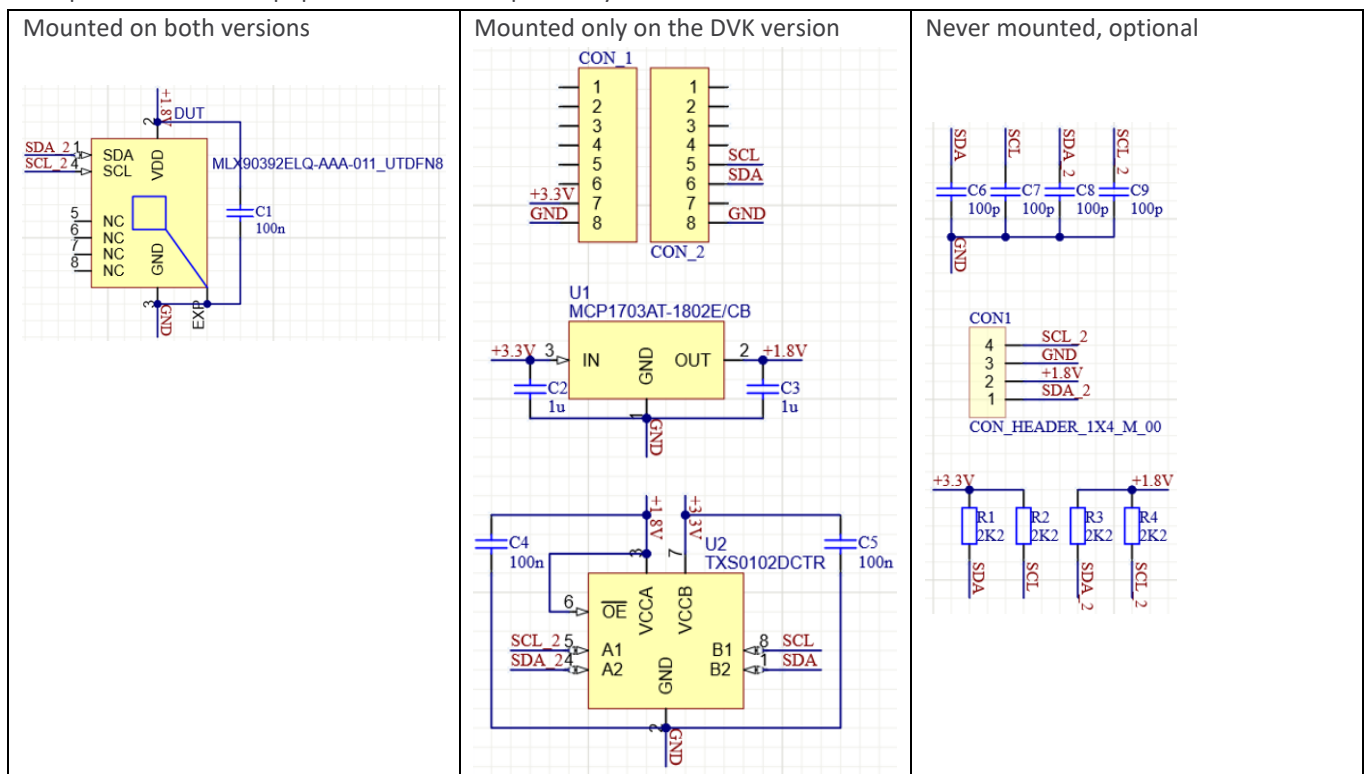

3.3 Microcontroller and GUI setup

Firmware is written for the below microcontroller. Note that the IC operates at 1.8V, so use a proper level shifter or the EVB90392 DVK version with a 3.3V microcontroller.

- Compatible Arduino®: <https://www.arduino.cc/>
 - An example code (.ino) is made implementing all the functions, executing them based on serial commands and returning the replies to the PC.⁽²⁾
 - Install the software from the website to have also the drivers and to be able to upload the code to the board.


As GUI, an executable is available which implements the commands of this document and visualizes the reply from the IC. As the GUI is written in LabVIEW™ software, make sure to install the runtime engine (2019, 32-bit) in order to run it, which can be downloaded free of charge.

² Due to the implementation of the I2C library, the “Read Direct” function does not detect Nacks. As from Rev2.0 of the demo code this has been fixed.

4 GUI

In the demo, three tabs are present. All of them are shown in the following chapters.

4.1 Initialization

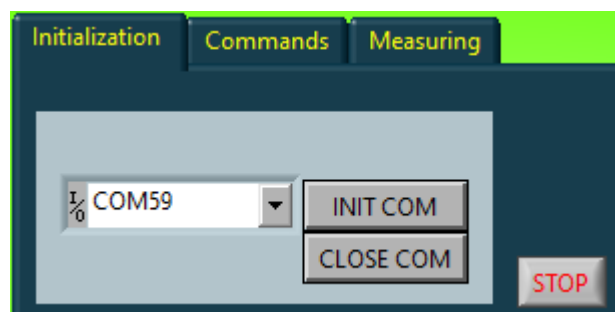

Button	Action/Usage
INIT COM	Select the COM port in the drop down list and click this button to connect to the device.
CLOSE COM	To close to COM port, click this button.
STOP	This button stops the UI, there is no need to use this normally.

4.2 Commands

If a Nack is detected, the green border will turn red.⁽²⁾


The screenshot shows the 'Commands' tab of the EVB90392 software interface. It features several functional areas:

- Frequency [Hz]:** A numeric input set to 100000 and an 'I2C freq' button.
- Reply:** A text area for receiving data.
- Flush RS232:** A button to flush the serial buffers.
- Addr Reset:** A button to send a reset command, with an 'I2C Address to Reset' input box below it.
- Read/Write Operations:** Includes 'Read Direct (max 16 bytes)', 'Read (max 16 bytes)', and 'Write' buttons. It also has input boxes for 'Nbytes(read)' (set to 16) and 'Register' (set to 0).
- Data Transfer:** 'Data to Write' and 'Data Received' sections with numeric inputs and up/down arrows.
- Configuration:** 'Get Config (0x14-0x15)' and 'Set Config (0x14-0x15)' buttons, followed by a list of 8 registers with their values (all shown as 0).
- Status Monitoring:** 'Set Mode' (currently '0: Power-Down') and 'Get XYZT' buttons. It also includes a checkbox for 'Include T in Readback?' and status indicators for X, Y, Z, T coordinates and STAT1, STAT2, DRDY, HOVF, RT, and DOR.

Button	Action/Usage
I2C freq	Change the I ² C frequency. By default, the I ² C frequency is set to 100kHz.
Flush RS232	Flush the RS232 buffers, click a couple of times in case of corrupted data.
Addr Reset	Send a reset command to the device with I ² C address as in the “I2C Address to Reset” input box.
Read Direct	Read a number of registers (specified by input box “Nbytes(read)”, starting from register 0x00. Answer shown in the “Data Received” output box.
Read	Read a number of registers (specified by input box “Nbytes(read)”, starting from the register specified by the input box “Register”. Answer shown in the “Data Received” output box.
Write	Write the content in the input box “Data to Write” to the IC, starting from the register specified by the input box “Register”.
Get Config	Reads registers 0x14 and 0x15 and decodes them in the section below.
Set Config	Writes registers 0x14 and 0x15 with the content of the section below.
Set Mode	Select a mode in the enumeration list next to it and click to set the IC in that mode.
Get XYZT	Get the magnetic measurement and status (and decoded status) from the IC, and show the result in the below output boxes. Temperature can also be read out if “Include T in Readback?” is set.

4.3 Measuring

If a Nack is detected, the green border will turn red. A conversion to μT and degC using typical sensitivity can be done. Selection of the correct version is needed.

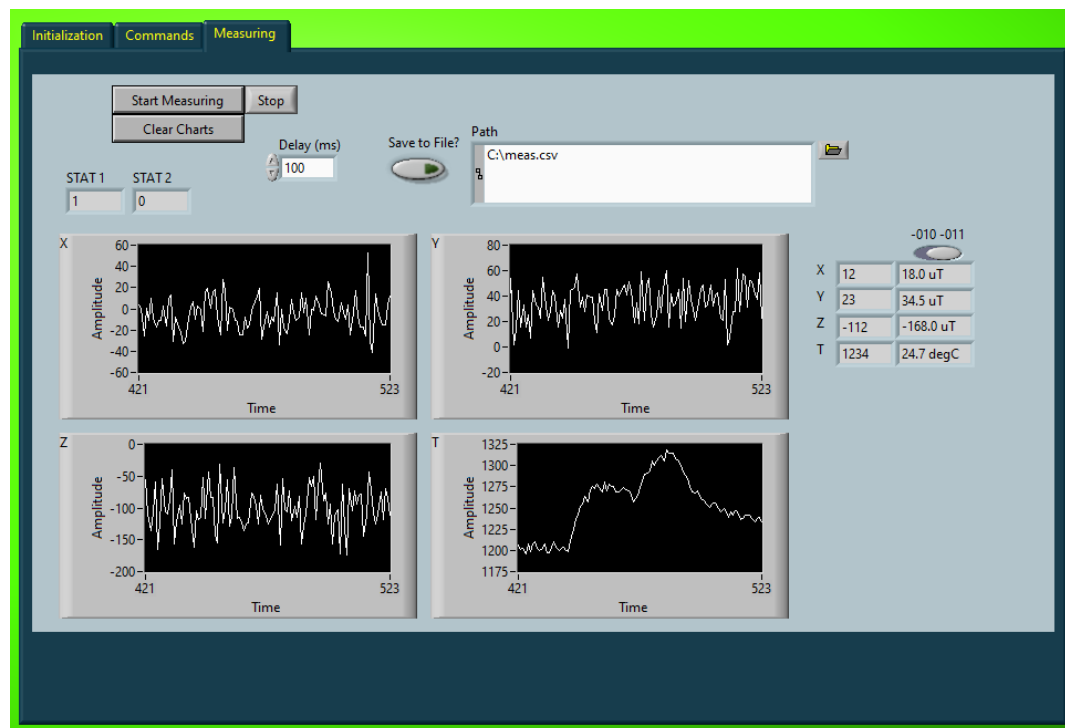

Button	Action/Usage
Start Measuring	Starts sending in a loop single measurement commands to the IC, and asks after a delay specified by "Delay (ms)" the measurement results from the IC. The data is displayed in the graphs below. Enabling the option "Save to File?" allows for the data to be stored in a csv format. Specify the path first.
Stop	Stop the measurement loop, it allows for the last loop to be completed.
Clear Charts	Clears the graphs below.
-010 -011	Set to the correct version to use the correct sensitivity for the conversion LSB to μT .

5 Serial Commands

The commands are sent on the serial bus with following settings:

Setting	Value
Baud rate	9600
# Data bits	8
# Stop bits	1
Parity	None
Flow control	No
End character (PC->microcontroller)	None needed (if ending is sent, execution starts before ending is received and ending is discarded)
End character (microcontroller->PC)	0x0A (“\n” or “Line Feed”)

If more than one information is returned, each data section is ended by a “;” to allow for splitting, this includes the last section. In case of a single information, the data is not ended by a “;”.

5.1 Read N Bytes

To read N bytes starting from a specified register, send to the microcontroller the following sequence. Note that setting Nbytes to 0 will equal 16 bytes to be read out.

Char #	Message to send	Example: Read 2 bytes, starting from register 0x14
1	A as character	A
2	R[7:4] as hex character	1
3	R[3:0] as hex character	4
4	Nbytes as hex character	2

Data #	Data received	Example: Read 2 bytes, starting from register 0x14
1	Nack; >0 if I ² C NACK are observed	0;
2	R_1[7:0]; in decimal value	225;
3	R_2[7:0]; in decimal value	
...	...	
N+1	R_N[7:0]; in decimal value	181;
N+2	“\n”	\n

5.2 Read Direct N Bytes

To read N bytes starting from register 0x00, send to the microcontroller the following sequence. Note that setting Nbytes to 0 will equal 16 bytes to be read out.⁽²⁾

Char #	Message to send	Example: Read Direct 16 bytes
1	B as character	B
2	Nbytes as hex character	0

Data #	Data received	Example: Read Direct 16 bytes
1	Nack; >0 if I ² C NACK are observed	0;
2	R_1[7:0]; in decimal value	0;
3	R_2[7:0]; in decimal value	0;
...	...	0;0;0;0;0;0;0;152;186;0;0;0;
17	R_N[7:0]; in decimal value	0;
18	"\n"	\n

5.3 Addressed Reset

To send an addressed reset on the bus, send to the microcontroller the following sequence.

Char #	Message to send	Example: Addressed Reset, 7-bit I ² C address 0x0C
1	D as character	D
2	I2CAddr[6:4] as hex char, pad MSB "0"	0
3	I2CAddr[3:0] as hex character	C

Data #	Data received	Example: Addressed Reset, 7-bit I ² C address 0x0C
1	Nack >0 if I ² C NACK are observed	0
2	"\n"	\n

5.4 Write N Bytes

To write N bytes starting from a specified register, send to the microcontroller the following sequence.

Char #	Message to send	Example: Write 0xE1 0xB5, starting from register 0x14
1	E , as character	E
2	R[7:4] as hex character	1
3	R[3:0] as hex character	4
4	D1[7:4] as hex character	E
5	D1[3:0] as hex character	1
6	D2[7:4] as hex character	B
7	D2[3:0] as hex character	5
...	...	-
2*N+3	DN[7:4] as hex character	-
2*N+4	DN[3:0] as hex character	-
2*N+5	T as character (terminate transmission)	T

Data #	Data received	Example: Write 0xE1 0xB5, starting from register 0x14
1	Nack >0 if I ² C NACK are observed	0
2	"\n"	\n

5.5 Change I²C Frequency


To change the I²C frequency, this command has to be sent. The length of the frequency value (in Hz) is fixed to 7 decimals, so padding with “0” is required for frequencies smaller than 1MHz. The default I²C frequency is 100kHz.

Char #	Message to send	Example: Set I ² C frequency to 100kHz
1	W , as character	W
2	F6 as hex character	0
3	F5 as hex character	1
4	F4 as hex character	0
5	F3 as hex character	0
6	F2 as hex character	0
7	F1 as hex character	0
8	F0 as hex character	0

Data #	Data received	Example: Set I ² C frequency to 100kHz
1	“I2C freq now: xxxxx Hz\n”	I2C freq now: 100000 Hz\n

6 Examples


In the examples, the I²C communication is shown using the legend below:

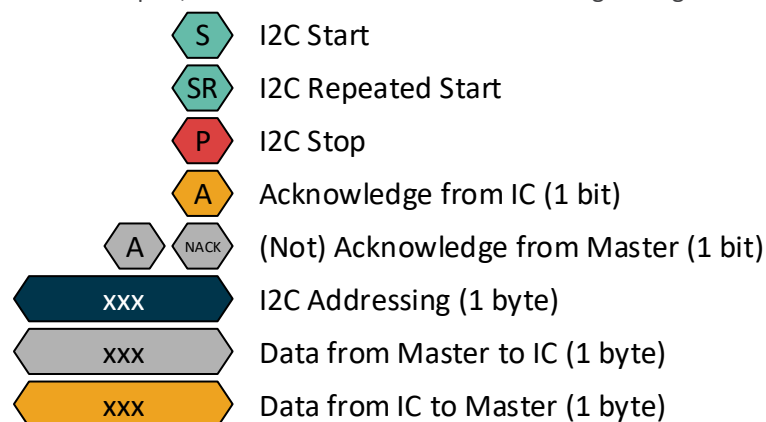

6.1 Changing Filter Settings

7-bit I²C address is 0x0C, this gives for reading 0x19 and for writing 0x18 as byte to send on the I²C bus. The digital filters (one for XY and one for Z) for the magnetic measurements will be both set to zero.


A first step is to read the registers where the filters are stored, in order to know what the content is of the other bits in the registers. The filters are stored at register 0x14 (XY) and at register 0x15 (Z). Both will be read out with an addressed memory read command:




Setting 0x14[5:3] and 0x15[2:0] to 0 gives 0xC1 and 0xB0 as new content for registers 0x14 and 0x15 respectively:



An addressed memory read is performed again to verify that the content is written:




Note that it is not written in non-volatile memory! Issuing a reset command will set the content back to the factory defaults:




6.2 Performing a Single Measurement (XYZ)

7-bit I²C address is 0x0C, this gives for reading 0x19 and for writing 0x18 as byte to send on the I²C bus.

First the mode '1' needs to be written into register 0x10:




From register 0x00, the measurement data and status bytes can be read out after the measurement came to completion. A Read Direct is used here:




6.3 Performing a Continuous Measurement (XYZT, 100Hz), and Returning to Idle Mode

7-bit I²C address is 0x0C, this gives for reading 0x19 and for writing 0x18 as byte to send on the I²C bus.


First the mode '5' needs to be written into register 0x10:



From register 0x00, the measurement data and status bytes can be read out after the measurement came to completion. A Read Direct is used here. This can be done repeatedly to get new data.



To go back to idle, set the mode back to '0':



7 Revision history

Revision	Date	Change history
001	Apr-21	Creation
002	July-21	Footnote 1: Rev2.0 of the demo code has a detection of missing bytes
003	Mar-22	I2C commands in example section: wrong color for some data bytes, 1 ACK missing
004	06-Jul-26	Template update, including ordering codes, removal of MBED

Table 1 – Revision history

8 Disclaimer

The content of this document is believed to be correct and accurate. However, the content of this document is furnished "as is" for informational use only and no representation, nor warranty is provided by Melexis about its accuracy, nor about the results of its implementation. Melexis assumes no responsibility or liability for any errors or inaccuracies that may appear in this document. Customer will follow the practices contained in this document under its sole responsibility. This documentation is in fact provided without warranty, term, or condition of any kind, either implied or expressed, including but not limited to warranties of merchantability, satisfactory quality, non-infringement, and fitness for purpose. Melexis, its employees and agents and its affiliates' and their employees and agents will not be responsible for any loss, however arising, from the use of, or reliance on this document. Notwithstanding the foregoing, contractual obligations expressly undertaken in writing by Melexis prevail over this disclaimer.

This document is subject to change without notice, and should not be construed as a commitment by Melexis. Therefore, before placing orders or prior to designing the product into a system, users or any third party should obtain the latest version of the relevant information.

Users or any third party must determine the suitability of the product described in this document for its application, including the level of reliability required and determine whether it is fit for a particular purpose.

This document as well as the product here described may be subject to export control regulations. Be aware that export might require a prior authorization from competent authorities. The product is not designed, authorized or warranted to be suitable in applications requiring extended temperature range and/or unusual environmental requirements. High reliability applications, such as medical life-support or life-sustaining equipment or avionics application are specifically excluded by Melexis. The product may not be used for the following applications subject to export control regulations: the development, production, processing, operation, maintenance, storage, recognition or proliferation of:

- 1. chemical, biological or nuclear weapons, or for the development, production, maintenance or storage of missiles for such weapons;*
- 2. civil firearms, including spare parts or ammunition for such arms;*
- 3. defense related products, or other material for military use or for law enforcement;*
- 4. any applications that, alone or in combination with other goods, substances or organisms could cause serious harm to persons or goods and that can be used as a means of violence in an armed conflict or any similar violent situation.*

No license nor any other right or interest is granted to any of Melexis' or third party's intellectual property rights.

If this document is marked "restricted" or with similar words, or if in any case the content of this document is to be reasonably understood as being confidential, the recipient of this document shall not communicate, nor disclose to any third party, any part of the document without Melexis' express written consent. The recipient shall take all necessary measures to apply and preserve the confidential character of the document. In particular, the recipient shall (i) hold document in confidence with at least the same degree of care by which it maintains the confidentiality of its own proprietary and confidential information, but no less than reasonable care; (ii) restrict the disclosure of the document solely to its employees for the purpose for which this document was received, on a strictly need to know basis and providing that such persons to whom the document is disclosed are bound by confidentiality terms substantially similar to those in this disclaimer; (iii) use the document only in connection with the purpose for which this document was received, and reproduce document only to the extent necessary for such purposes; (iv) not use the document for commercial purposes or to the detriment of Melexis or its customers. The confidentiality obligations set forth in this disclaimer will have indefinite duration and in any case they will be effective for no less than 10 years from the receipt of this document.

This disclaimer will be governed by and construed in accordance with Belgian law and any disputes relating to this disclaimer will be subject to the exclusive jurisdiction of the courts of Brussels, Belgium.

The invalidity or ineffectiveness of any of the provisions of this disclaimer does not affect the validity or effectiveness of the other provisions.

The previous versions of this document are repealed.

Melexis © - No part of this document may be reproduced without the prior written consent of Melexis. (2026)

IATF 16949 and ISO 14001 Certified

Happy to help you! www.melexis.com/technical-inquiry

LabVIEW is a trademark of National Instruments. Neither Melexis, nor any software programs or other goods or services offered by Melexis, are affiliated with, endorsed by, or sponsored by National Instruments.